

## RS485 +12V DC Output

### Technical Instruction For RS485 Mod Bus Wiring Operation

- In order to improve the new OTA function, the [Main RS485 Interface \(Blue\)](#) had been isolated/removed its DC +12V output.
- Please connect to [Spare RS485 Interface \(Black\)](#) as below if you need +12V DC.



Single-Phase



Three-Phase